



SWADLING

BRASSWARE



U8011000



U8021000

INSTALLATION INSTRUCTIONS

Engineer Valve Trim sets

U8011000 - U8021000

IMPORTANT INSTALLATION INFORMATION

- Before Installation, please check all parts against the parts list on the back page of this booklet.
- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Swadling Brassware for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.

Swadling Brassware, Churchward Road, Yate, Bristol, BS37 5PL, UNITED KINGDOM


Telephone: 332 3730648

Email: helpline@swadlingbrassware.com



www.swadlingbrassware.com

PREPARATION


SINGLE CONTROLLED VALVE
U8011000

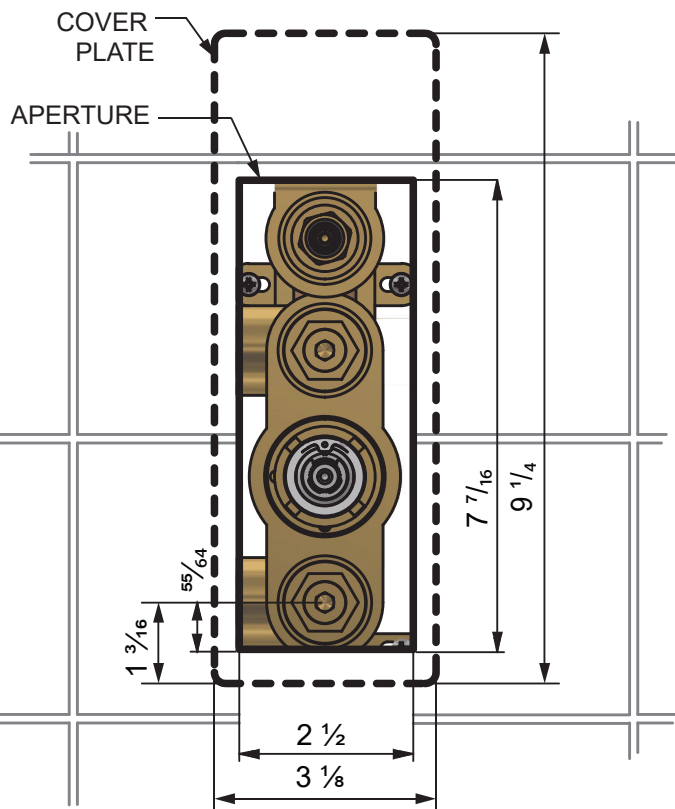

DOUBLE CONTROLLED VALVE
U8021000

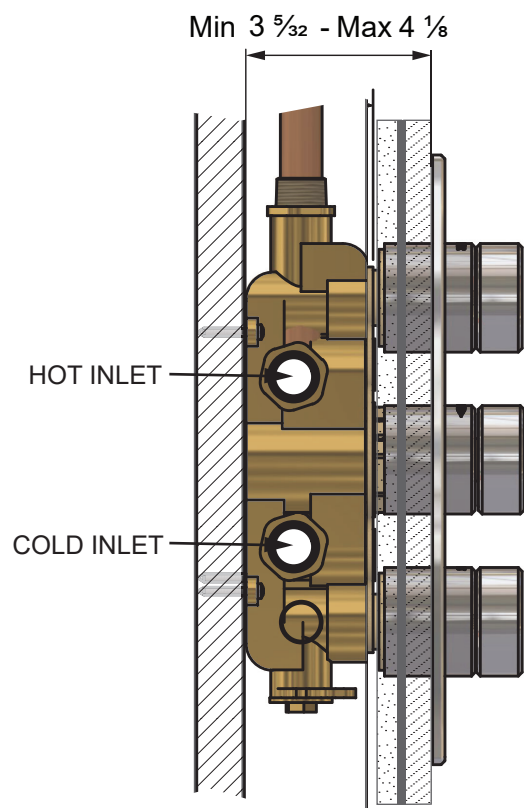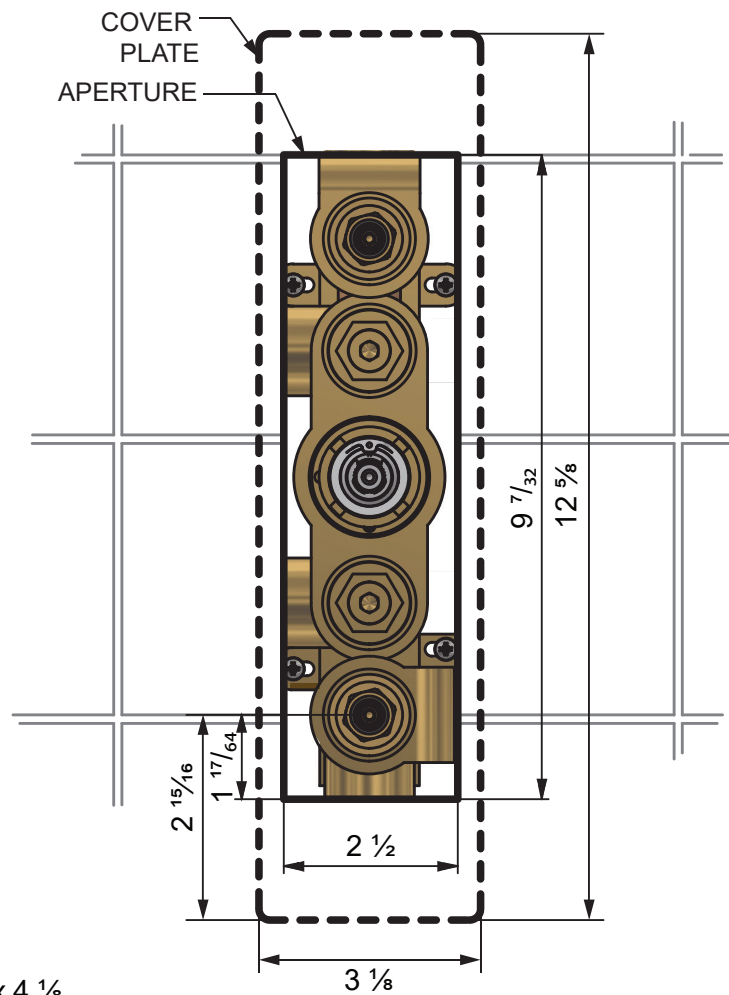

SETTING THE TEMPERATURE

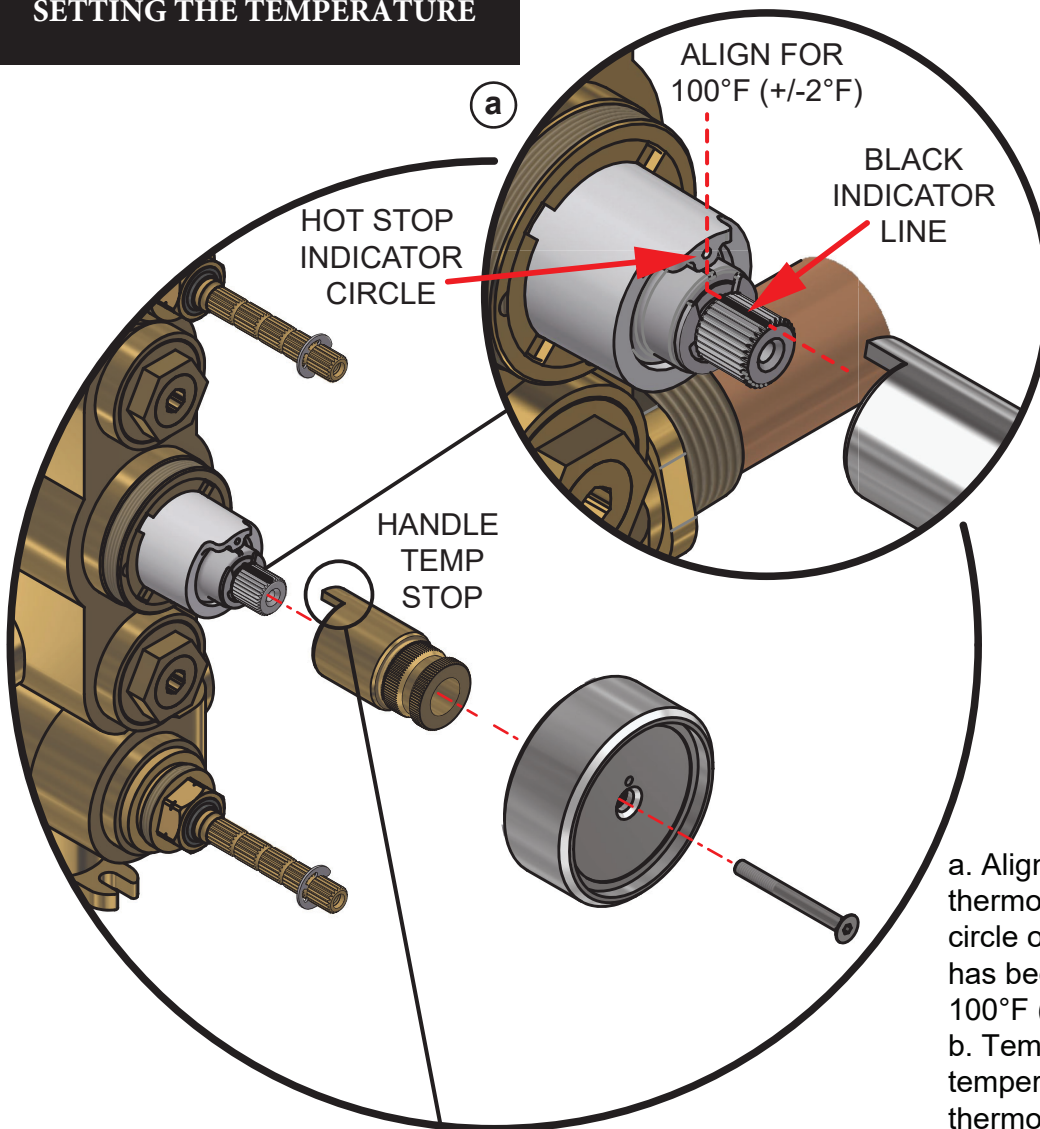

a. Align the black indicator line on the thermostatic spindle with the indicator circle on the cartridge housing. This has been factory set to achieve 100°F (+/-2°F) water temperature.


b. Temporarily assemble the temperature handle to the thermostatic cartridge making sure the handle temperature stop is against the right hand side of the thermostatic hot stop, this will be your maximum outlet temperature.

To increase the maximum outlet temperature - remove the handle assembly and re-position the handle temperature stop, rotated towards the clockwise direction by a few degrees, re-fit handle and turn back to stop position, re-test with a thermometer.

For SAFETY REASONS the maximum temperature should not exceed 105.8°F.


To decrease maximum temperature, using the handle, rotate temperature spline clockwise by a few degrees, remove the handle assembly and re-fit ensuring the handle temperature stop is against the right hand side of the thermostatic hot stop, re-test.

Remove handle assembly ensuring it is set in the hot stop position. Set aside handle assembly ready to assemble sleeve and plate.

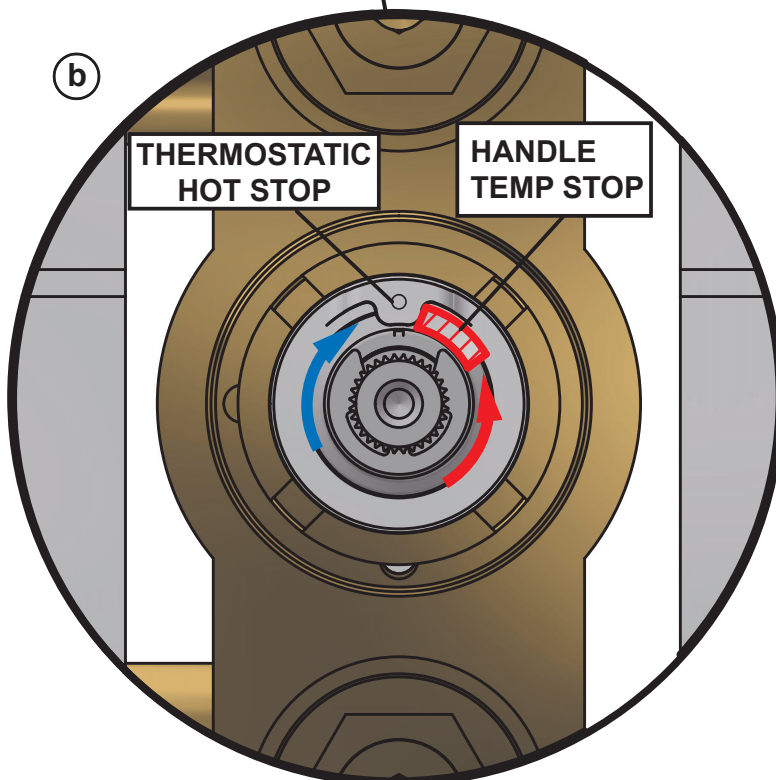

INSTALLATION

NOTE POSITION OF COLLAR ENGRAVING

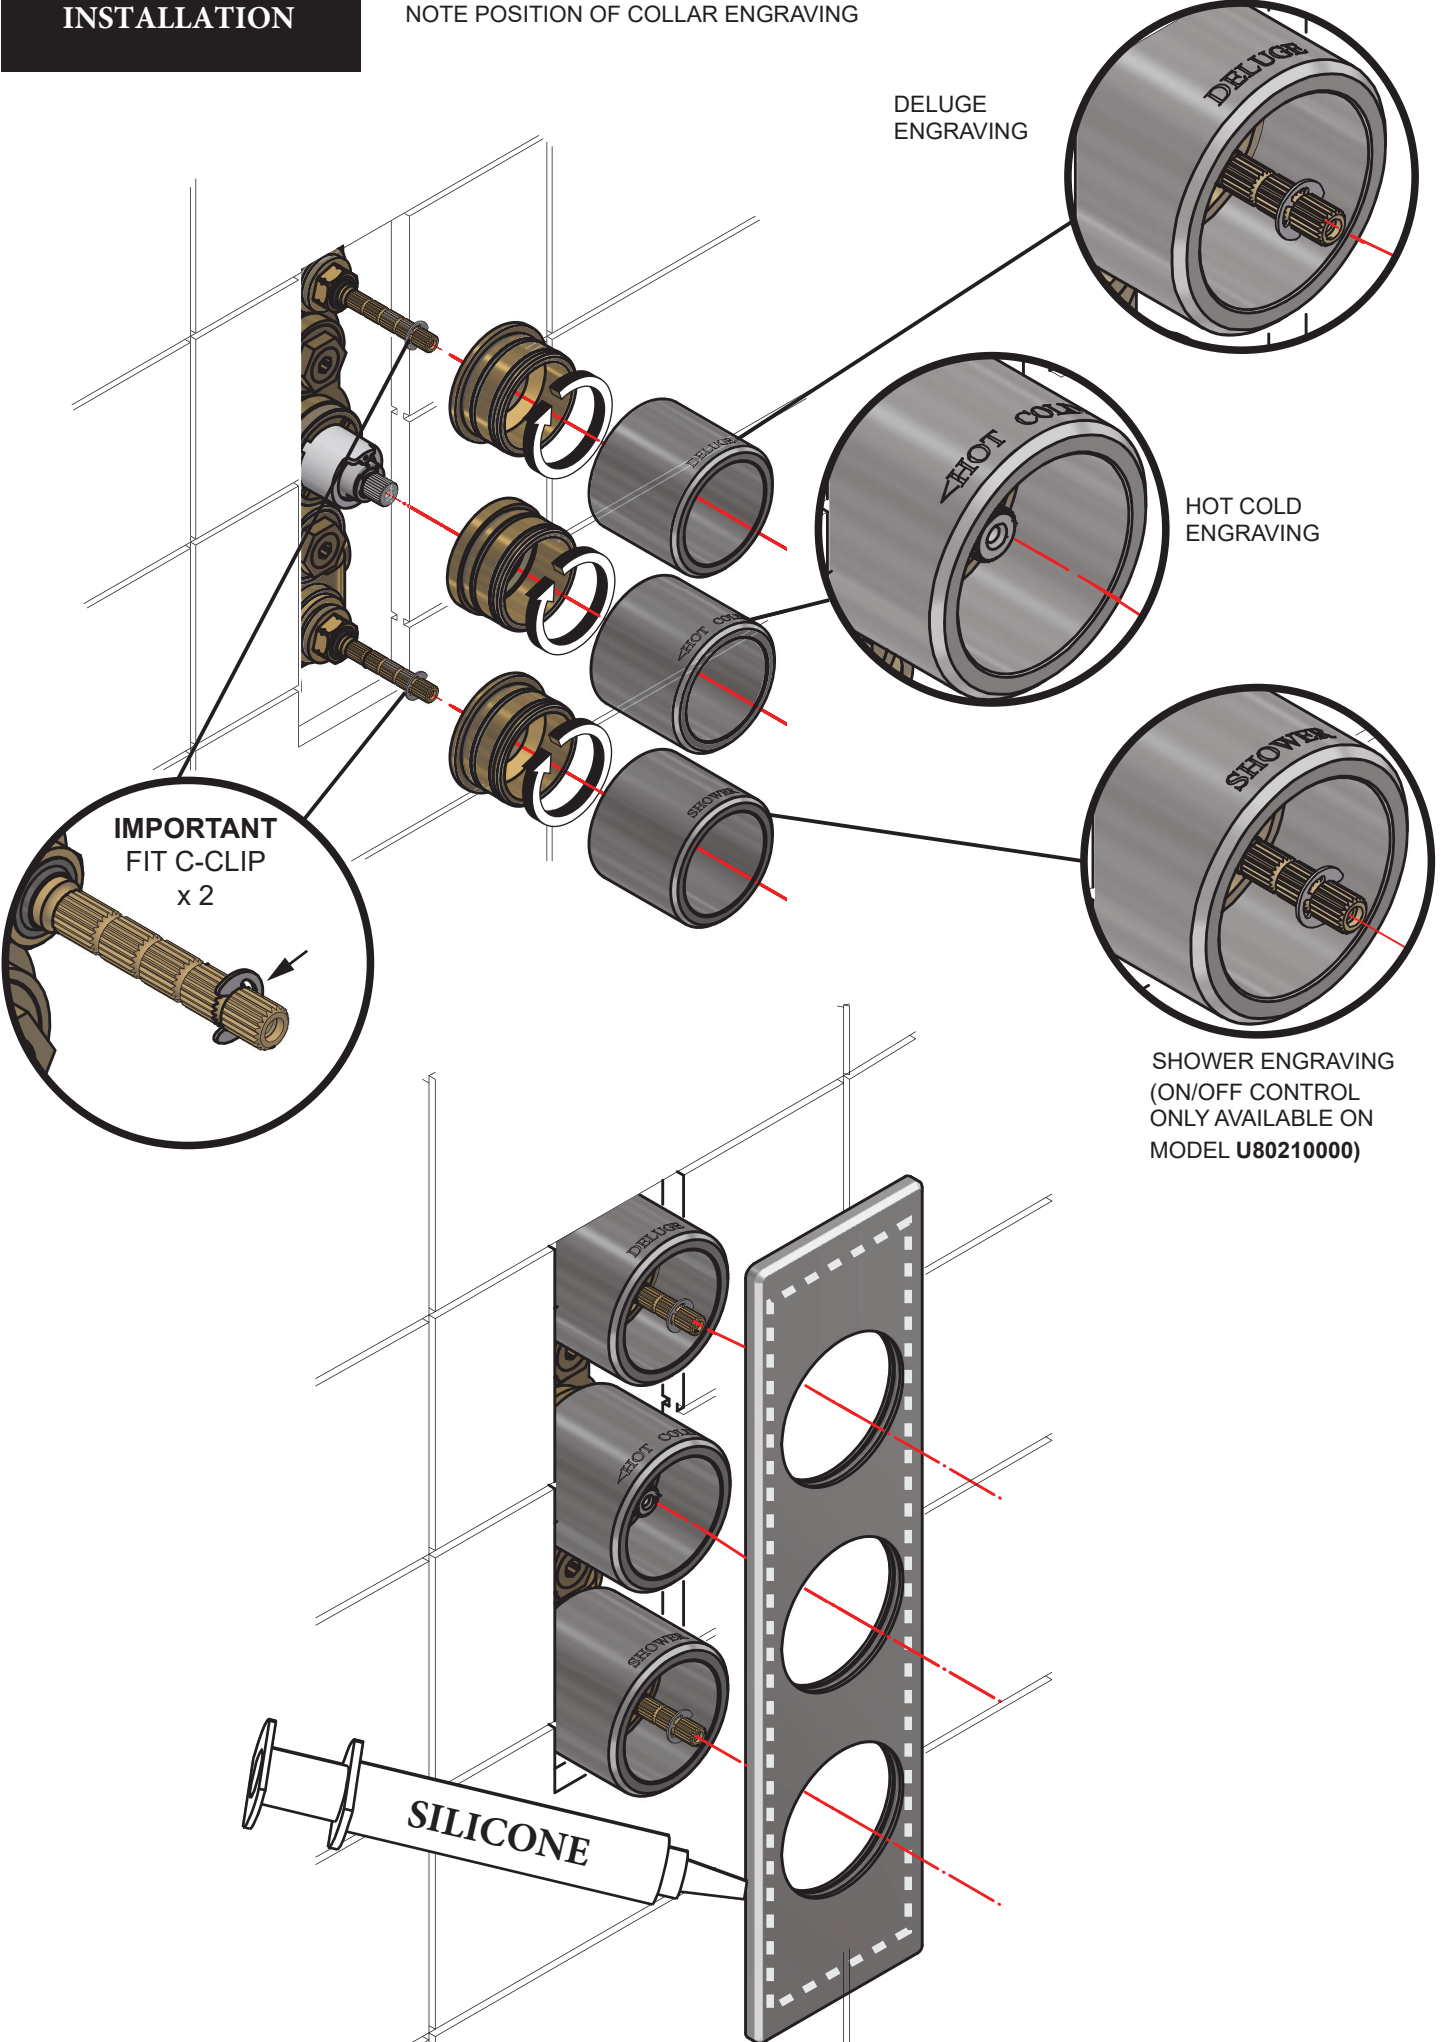


HANDLES

MODEL SHOWN IS **U8021000LV**

NUMBER OF ON/OFF CONTROLS VARY DEPENDING ON MODEL.

SEE 'HANDLE CONFIGURATION' PAGE FOR CORRECT HANDLE POSITIONING

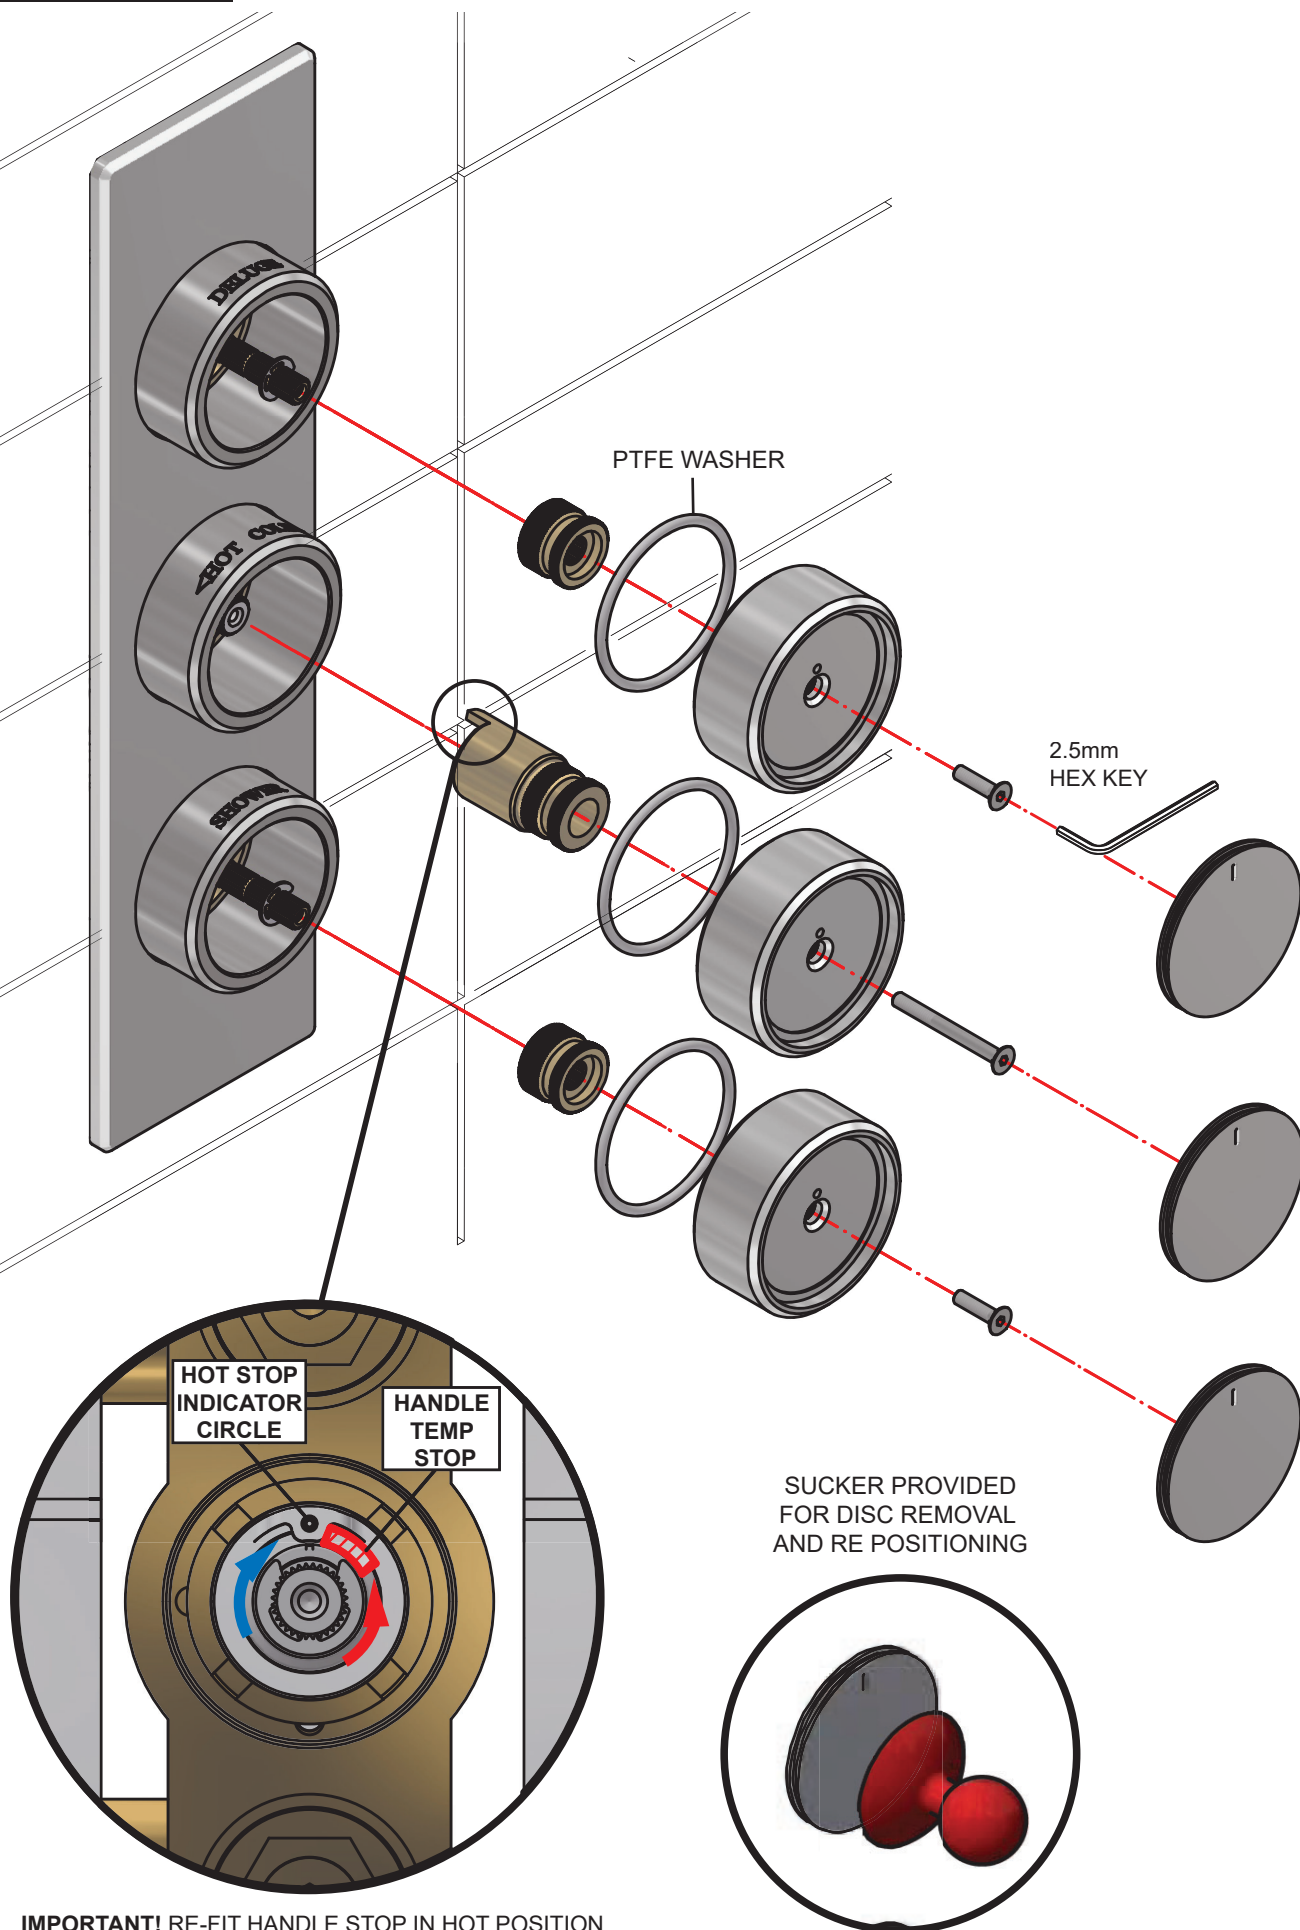

IMPORTANT! RE-FIT HANDLE STOP IN HOT POSITION
AS PRESET IN 'SETTING TEMPERATURE' STAGE

**HANDLE
CONFIGURATION**

SINGLE
CONTROLLED
THERMOSTATIC
SHOWER MIXER



U8011000

DOUBLE
CONTROLLED
THERMOSTATIC
SHOWER MIXER



U8021000

NOTES

PARTS LIST

