



SWADLING

BRASSWARE



U9011000XH



U9011000LV



U9021000XH



U9021000LV

INSTALLATION INSTRUCTIONS

Illustrious Valve Trim sets

U9011000 - U9021000

Handles Suffix : XH Cross LV Lever

Disc Suffix	3 Mother of Pearl
0 White Glass	6 Black Lip Pearl
2 Plain Brass	9 Black Glass

IMPORTANT INSTALLATION INFORMATION

- Before Installation, please check all parts against the parts list on the back page of this booklet.
- Make sure that the parts are undamaged and that their finish is as expected.
- Should you find a faulty or damaged part, please be in touch with our Customer Services Team immediately using the contact details below.
- Any claim for faulty or damaged parts will require the affected part to be returned to Swadling Brassware for inspection and testing.
- No claim for damaged parts or issues with a product finish will be accepted after the product has been installed.

Swadling Brassware, Churchward Road, Yate, Bristol, BS37 5PL, UNITED KINGDOM


Telephone: 332 3730648

Email: helpline@swadlingbrassware.com



www.swadlingbrassware.com

PREPARATION


SINGLE CONTROLLED VALVE
U9011000

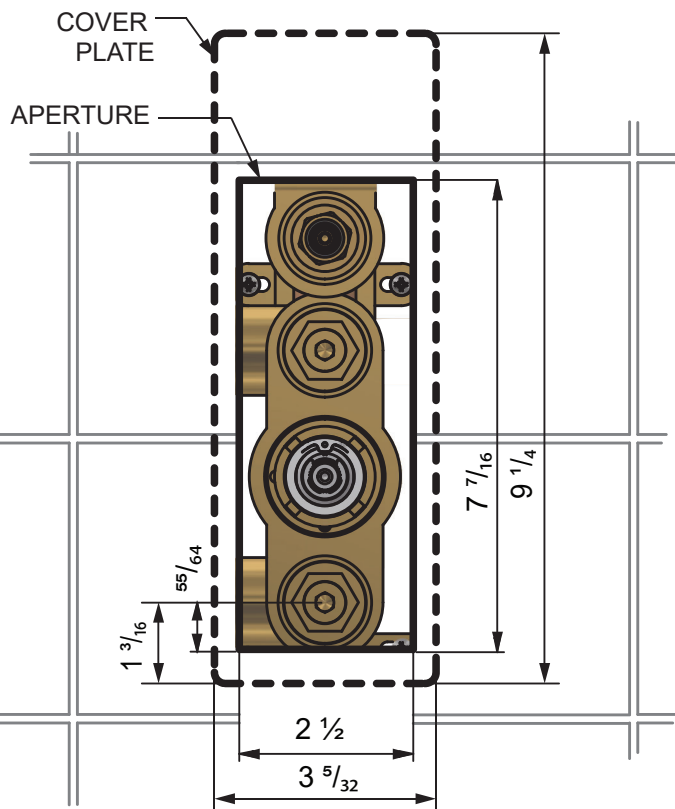

DOUBLE CONTROLLED VALVE
U9021000

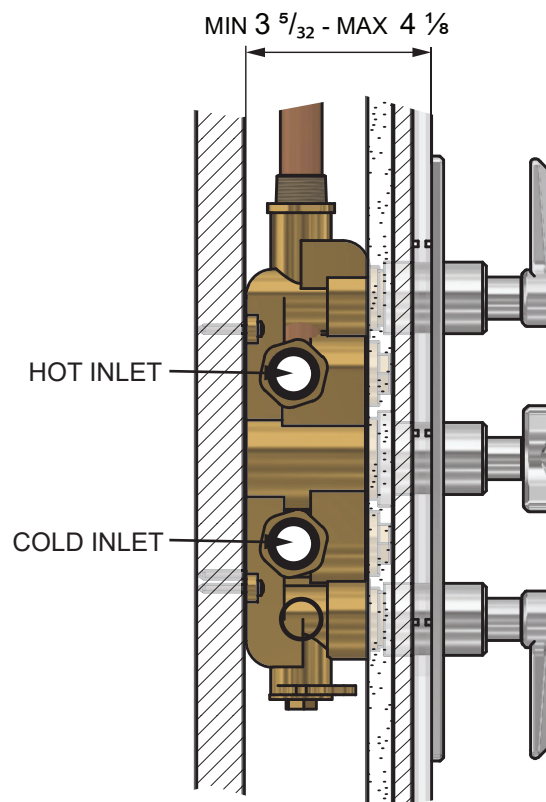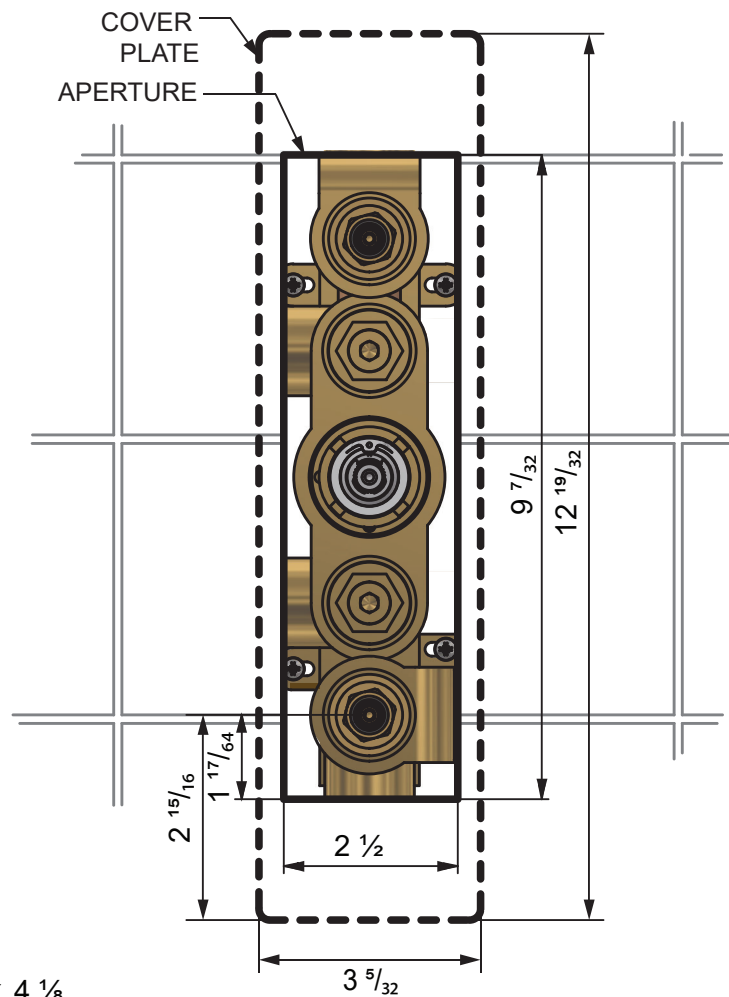

SETTING THE TEMPERATURE

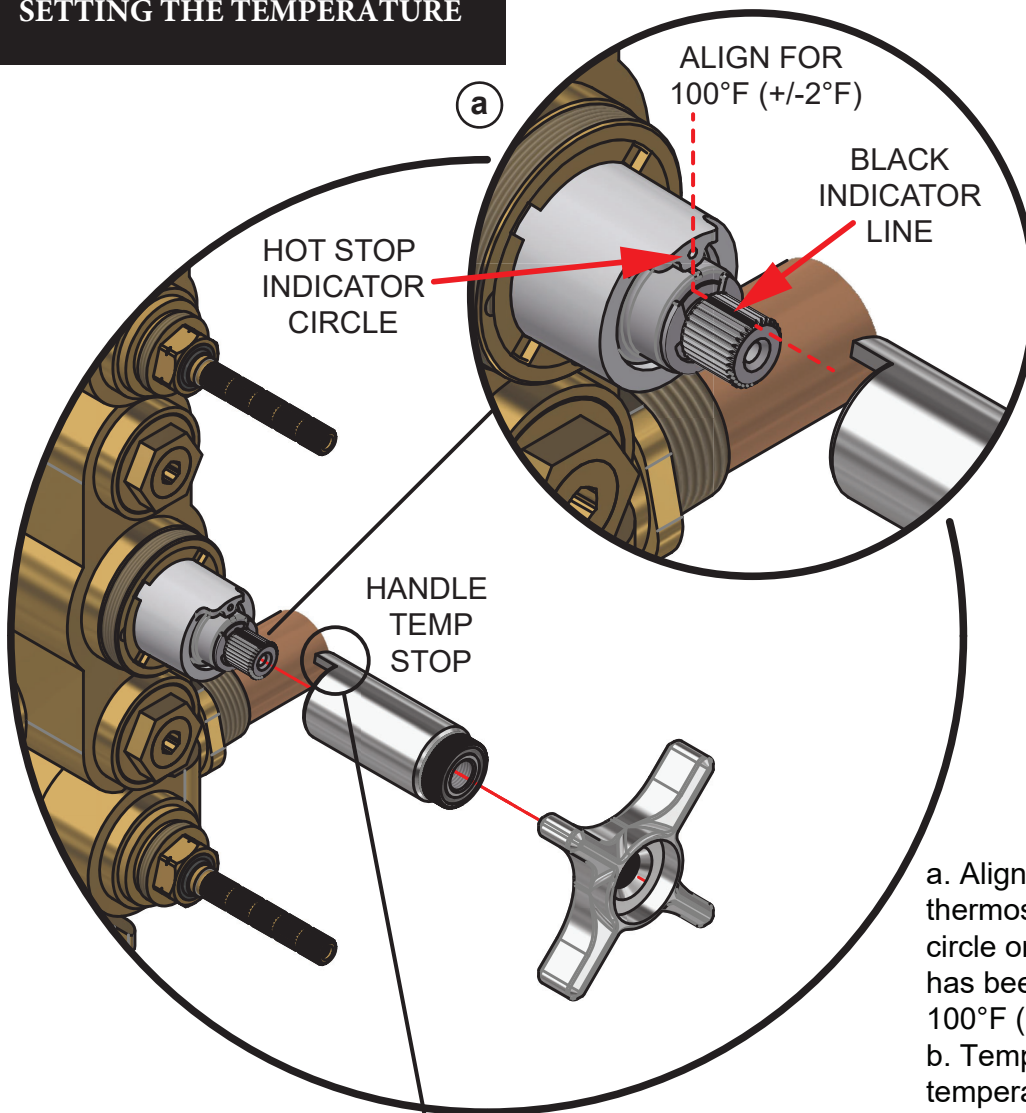

a. Align the black indicator line on the thermostatic spindle with the indicator circle on the cartridge housing. This has been factory set to achieve 100°F (+/-2°F) water temperature.


b. Temporarily assemble the temperature handle to the thermostatic cartridge making sure the handle temperature stop is against the right hand side of the thermostatic hot stop, this will be your maximum outlet temperature.

To increase the maximum outlet temperature - remove the handle assembly and re-position the handle temperature stop, rotated towards the clockwise direction by a few degrees, re-fit handle and turn back to stop position, re-test with a thermometer.

For SAFETY REASONS the maximum temperature should not exceed 105.8°F.



To decrease maximum temperature, using the handle, rotate temperature spline clockwise by a few degrees, remove the handle assembly and re-fit ensuring the handle temperature stop is against the right hand side of the thermostatic hot stop, re-test.

Remove handle assembly ensuring it is set in the hot stop position. Set aside handle assembly ready to assemble sleeve and plate.

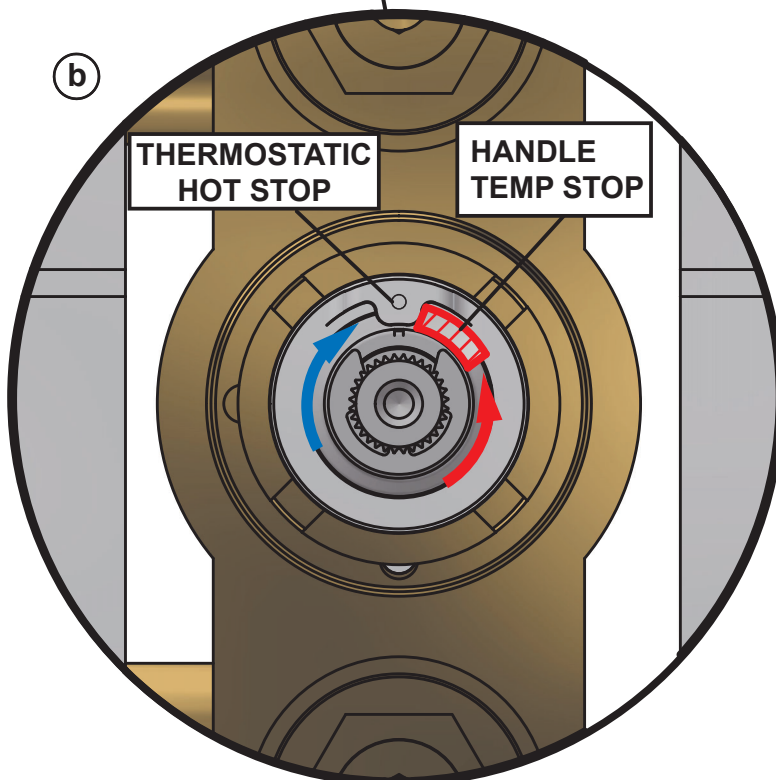


INSTALLATION

COLLAR ENGRAVING ONLY APPLIES ON MODELS WITH MOTHER OF PEARL, BLACK LIP PEARL OR BRASS HANDLE DISCS. OTHERWISE COLLARS ARE PLAIN

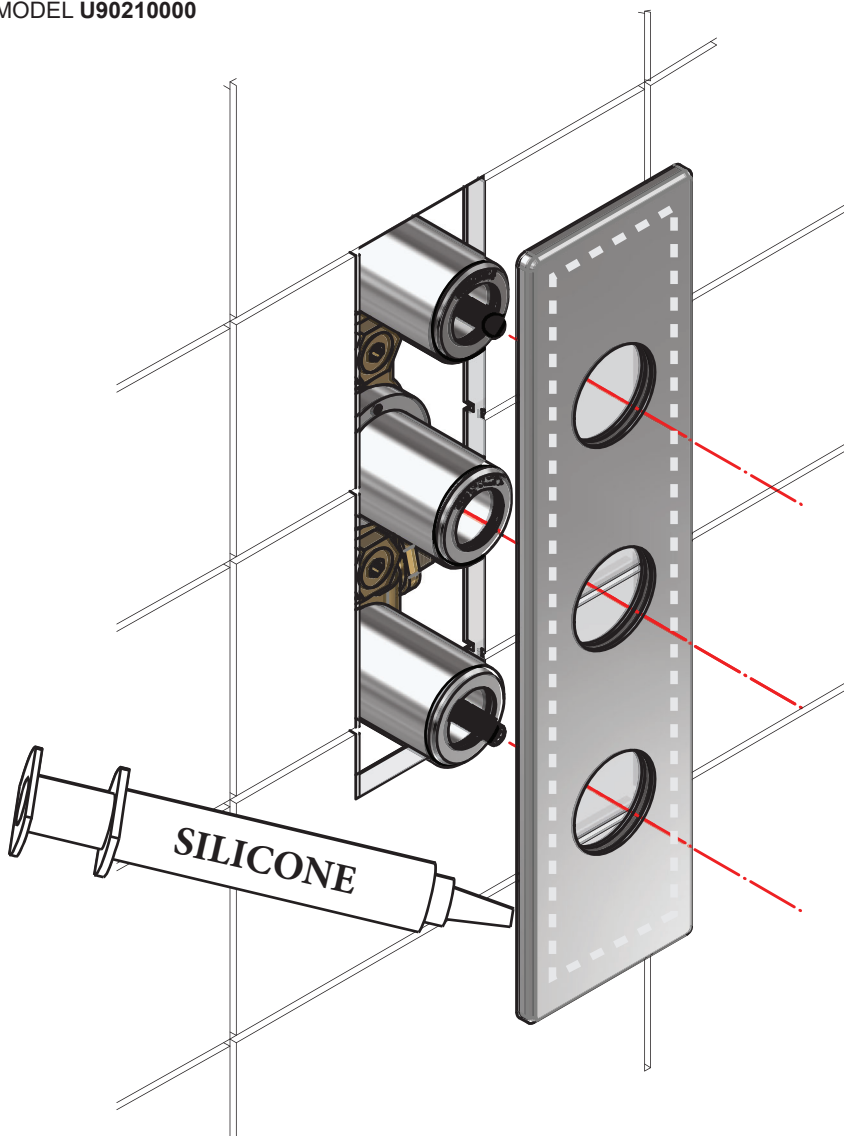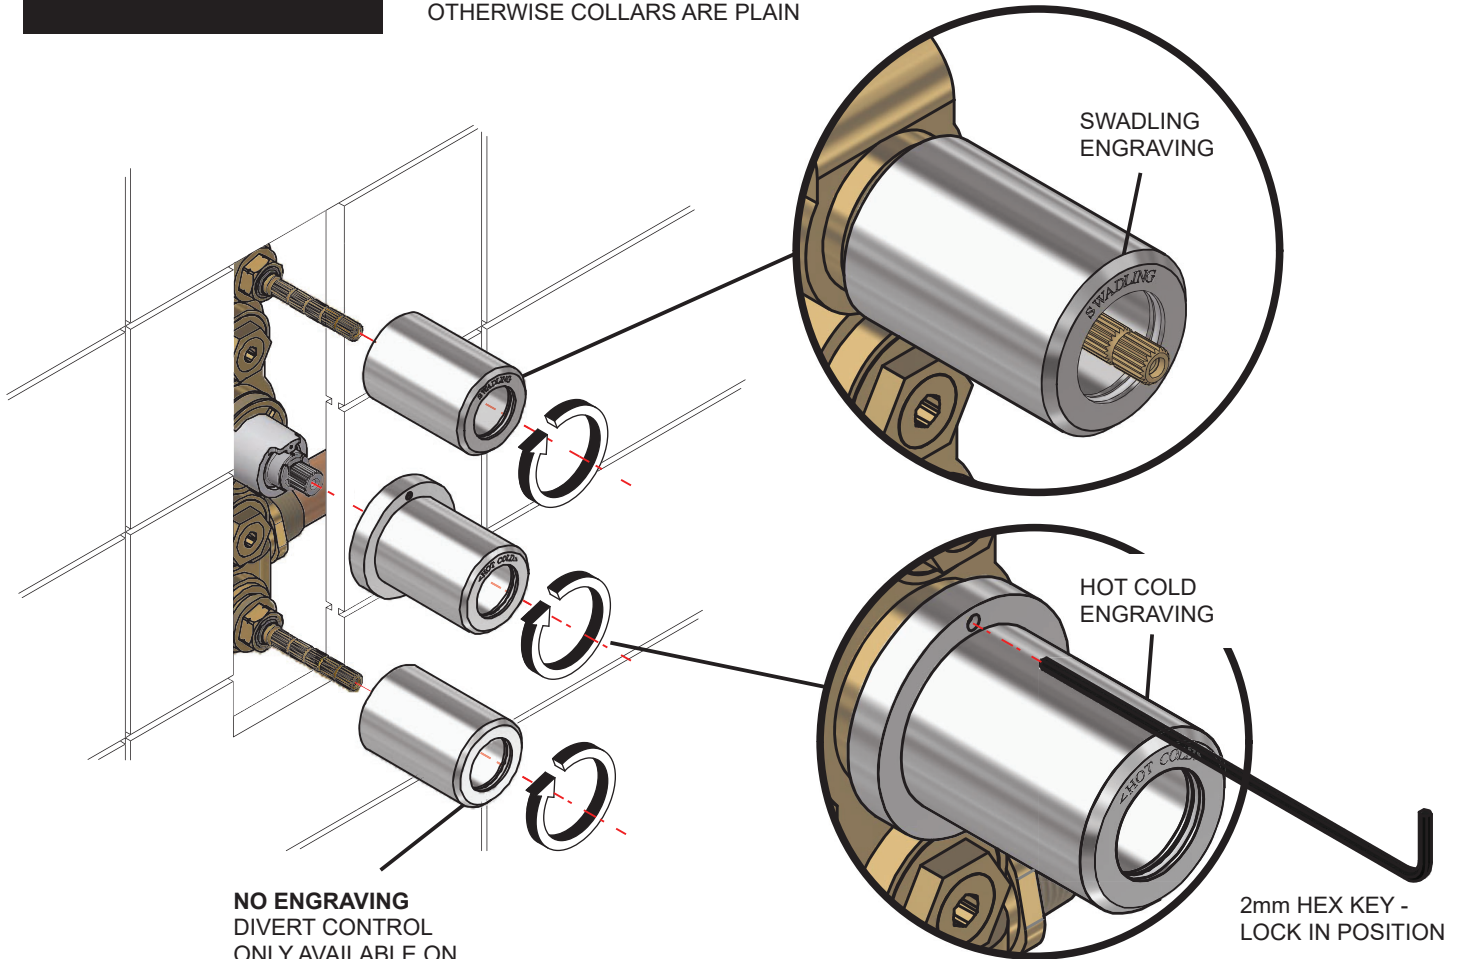

HANDLES

MODEL SHOWN IS **U9021000LV**
CONTROL HANDLES VARY DEPENDING ON MODEL.
SEE 'HANDLE CONFIGURATION' PAGE FOR CORRECT HANDLE POSITIONING

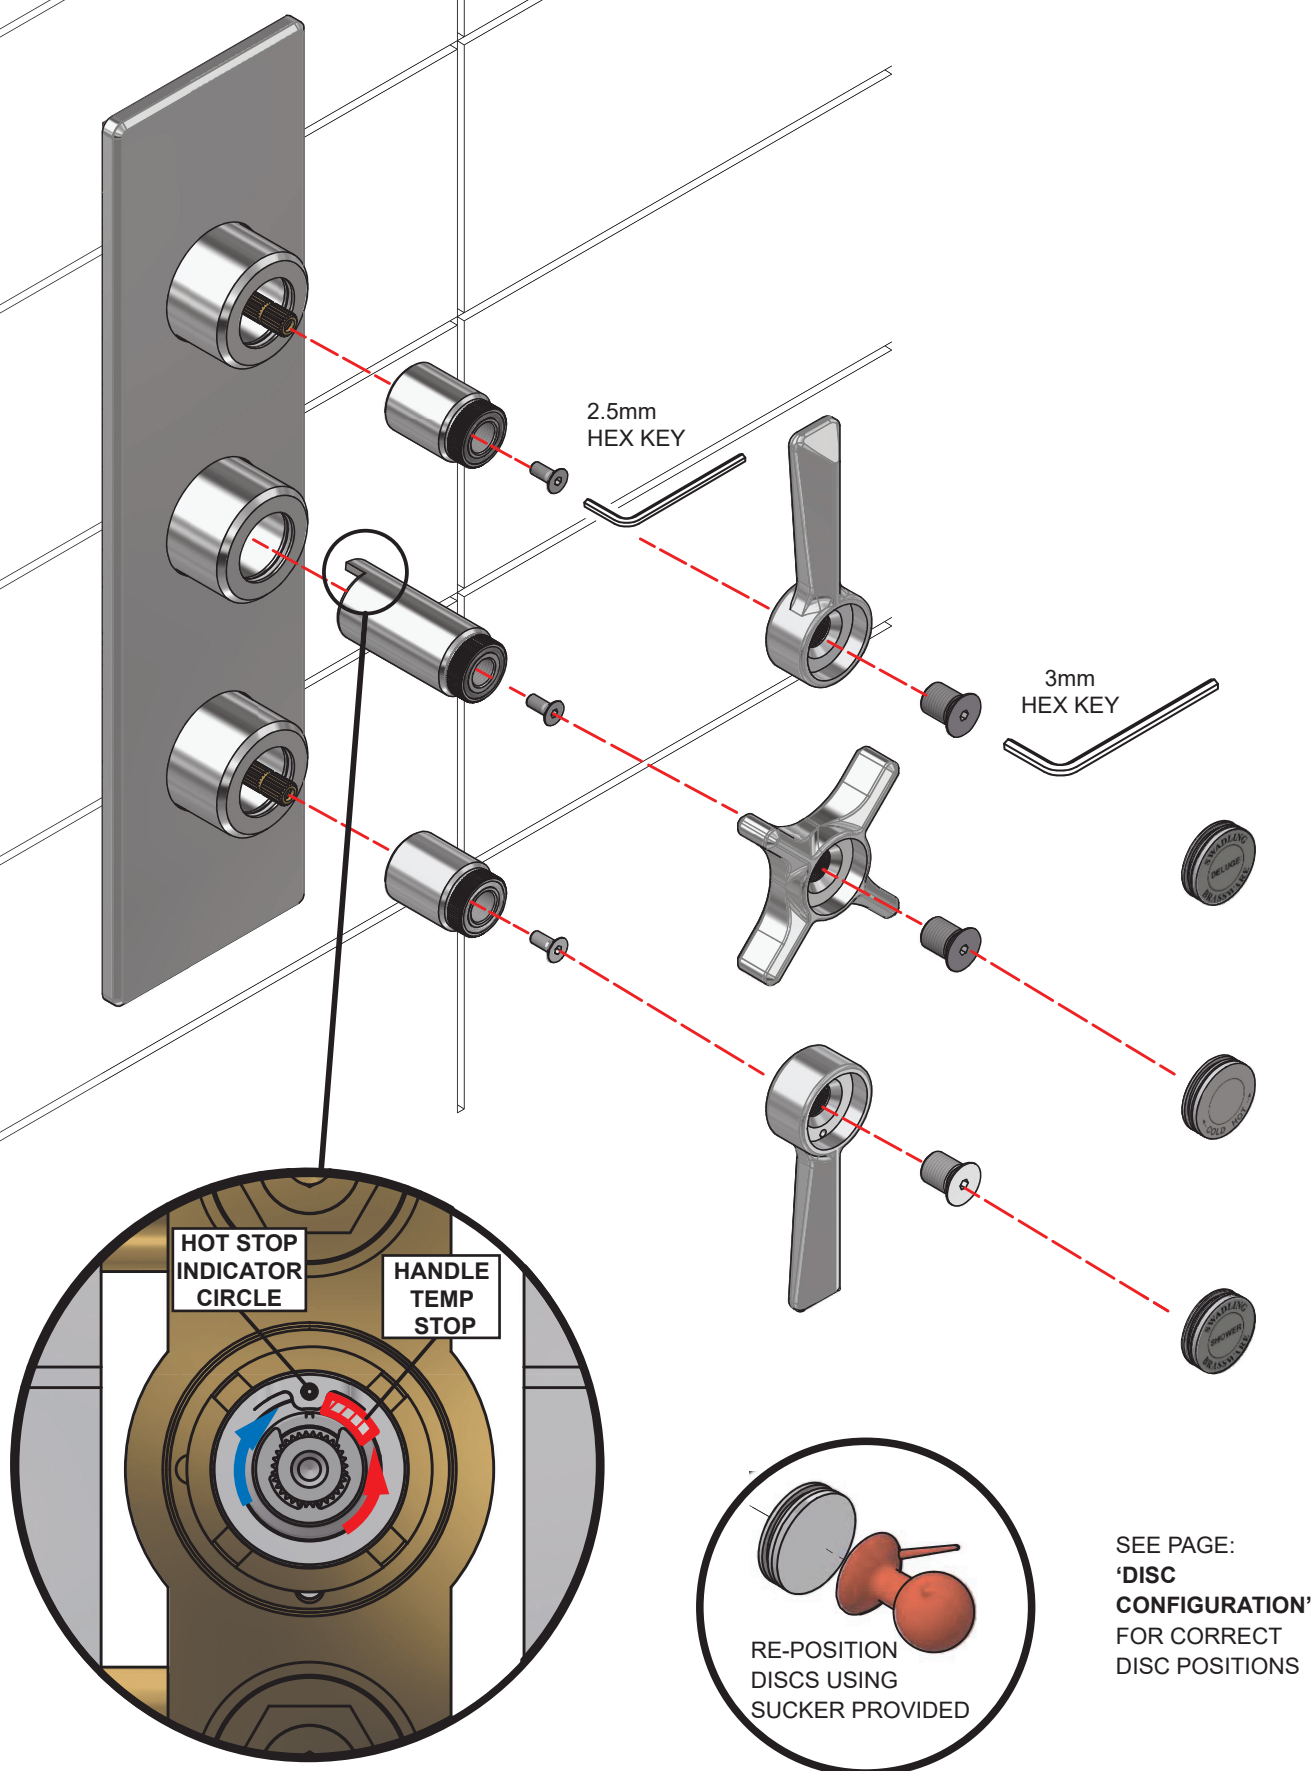

HANDLE CONFIGURATION

SINGLE
CONTROLLED
THERMOSTATIC
SHOWER MIXER



U9011000XH



U9011000LV

DOUBLE
CONTROLLED
THERMOSTATIC
SHOWER MIXER





U9021000XH



U9021000LV

DISC CONFIGURATION


ALTERNATIVE DELUGE MODELS

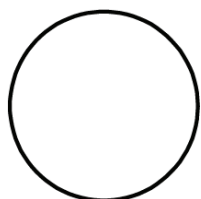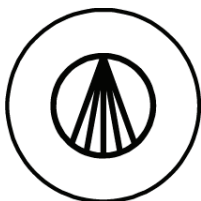

DELUGE INSERT

COLOUR	PART No.
MOTHER OF PEARL*	SB0015
BLACK LIP PEARL*	SB0018
WHITE DISC*	SB0004
BLACK DISC*	SB0008
PLAIN BRASS	SB0450
ART DECO DELUGE	SB0458

ALTERNATIVE SHOWER MODELS

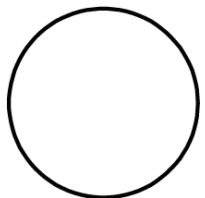


SHOWER INSERT

COLOUR	PART No.
MOTHER OF PEARL*	SB0015
BLACK LIP PEARL*	SB0018
WHITE DISC*	SB0001
BLACK DISC*	SB0005
PLAIN BRASS	SB0450
ART DECO SHOWER	SB0459




ALTERNATIVE HOT COLD MODELS

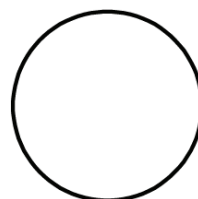

HOT COLD INSERT

COLOUR	PART No.
MOTHER OF PEARL*	SB0015
BLACK LIP PEARL*	SB0018
WHITE DISC*	SB0002
BLACK DISC*	SB0006
PLAIN BRASS	SB0450

ALTERNATIVE BATH MODELS

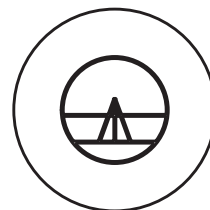

BATH INSERT

COLOUR	PART No.
ART DECO BATH	SB0460

PARTS LIST

MODEL SHOWN IS **U9021000LV**
CONTROL HANDLES VARY ON ALTERNATIVE MODELS.
SEE 'HANDLE CONFIGURATION' FOR HANDLE PLACEMENT

*COLLAR ENGRAVING ONLY
APPLIES ON MODELS WITH
MOTHER OF PEARL, BLACK LIP
PEARL OR BRASS HANDLE DISCS.
OTHERWISE COLLARS ARE PLAIN

